

This diagnostic software can test all ECUs on Honda models, including:

Engine, Automatic Transmission, Anti-lock Brake, Airbag, Occupant Posture Detection, Seat Weight, Electronic Stability, Smart key, Immobilizer, Tire Pressure Monitor, Electric Vacuum Bump, A/C, Instrument Cluster, Electric Parking Brake, Night viewing, and Body Control Model systems etc.

Model Coverage:

ACCORD	ACCORD_CROSSTOUR	
ACCORD_HYBRID		
ACCORD_V6	ACTY	ACTY_VAN
ACURA_1.6EL	ACURA_1.7EL	ACURA_2.2CL
ACURA_2.3CL	ACURA_2.5TL	ACURA_3.0CL
ACURA_3.2CL	ACURA_3.2TL	ACURA_3.5RL
ACURA_CSX	ACURA_EL	ACURA_MDX
ACURA_RDX	ACURA_RSX	ACURA_TL
ACURA_TSX	ACURA_TSX_V6	ACURA_ZDX
AIRWAVE	ASCOT	AVANCIER
BALLADE	BRIO	CAPA
CITY	CIVIC	CIVIC_5D
CIVIC_AERO.	CIVIC_COUPE	CIVIC_DIESEL
Civic_Flex	CIVIC_GX	CIVIC_HYBRID
CR-V	CR-X	CR-Z
CROSSROAD	delsol	DOMANI
EDIX	ELEMENT	ELYSION
FIT	FIT_ARIA	Fit_Flex
FIT_HYBRID	FIT_SHUTTLE	
FIT_SHUTTLE_HYBRID		
FR-V	FREED	FREED_SPIKE
GB-1_EVERUS_S1		
HR-V	INSPIRE	
INSPIRE_V6	INTEGRA	INTEGRA_SJ
JAZZ	JAZZ_HYBRID	LAGREAT
LEGEND	LIFE	LOGO
MDX	MOBILIO	MR-V
NSX	ODYSSEY	ODYSSEY_V6

ORTHIA
PRELUDE
S-MX
SPIKE
STREAM
VAMOS

PARTNER
RAFAGA
S2000
SPIRIOR
That_s
Z

PILOT
RIDGELINE
SHUTTLE
STEP_WGN
TODAY
Zest

Basic Functions:

- Read car computer information
- Read car fault information
- Clear car fault information
- Read car running data
- Actuation test for car component

Special Functions:

※ Some systems have special functions:

- Engine system
 - ▲ Write VIN
 - ▲ Crankshaft position sensor matched value learning
 - ▲ Throttle position learning
 - ▲ Main fuel tank alcohol content writing data
 - ▲ IQA data status
 - ▲ IQA write data
 - ▲ DPF regeneration
 - ▲ DPF pressure differential sensor initial learning
 - ▲ Reset calculated PM value
- AT [Automatic Transmission]
 - ▲ Start clutch feedback learning
 - ▲ Incline sensor learning
- ABS[Anti-lock Brake System]
 - ▲ Steering angle sensor neutral point setting
- SRS[Supplemental Inflatable Restraint System]
 - ▲ OPDS(Occupant Posture Detection System) initialization

- ▲ SWS(Seat Weight Sensor) initialization
- EPS[Electric Power Steering]
 - ▲ Torque sensor learning
- IMA[Integrated Motor Assist]
 - ▲ Motor rotor position calibration
 - ▲ Charging status preset
- HONDA smart key system
 - ▲ Add one HONDA smart key
 - ▲ Reset HONDA smart key
 - ▲ All HONDA smart key lost
 - ▲ Replace HONDA smart key ECU
 - ▲ Replace ignition knob
- TPMS[Tire Pressure Monitor System]
 - ▲ Sensor ID learning
 - ▲ Reprogram of backup tire
 - ▲ Reprogram of standard tire
- VTM-4[Vehicle Traction Model]
 - ▲ Initialization
- SH-AWD[Super Handling All Wheel Drive]
 - ▲ Differentials torque
 - ▲ Yaw rate/lateral acceleration sensors
 - ▲ Steering angle sensor
 - ▲ Initialization
 - ▲ All sensors
- Hydraulic booster
 - ▲ Memory 0 [zero] position
- Body control (instrument cluster)
 - ▲ Instrument control module replacement
 - ▲ Service reminder (American market)

- ▲ Service reminder (European market)
- Body control (power window)
 - ▲ Driver's power window reset
 - ▲ Front passenger's power window reset
 - ▲ Left rear power window reset
 - ▲ Right rear power window reset
- Remote starter
 - ▲ Register remote engine starter unit
- Immobilizer
 - ▲ Add one key
 - ▲ Reset key
 - ▲ All keys lost
 - ▲ Replace anti-start unit
 - ▲ Replace ECM/PCM(Engine Control Model)
 - ▲ Replace MPCS/MICU/IMOES(Multiplexed Control Unit)
 - ▲ Keyless transmitter login
- One touch starting
 - ▲ Add one key
 - ▲ Reset key
 - ▲ All keys lost
 - ▲ Key cylinder unit
 - ▲ Replace Smart unit
 - ▲ Replace ECM/PCM(Engine Control Model)
 - ▲ Replace MICU(Multiplexed Control Unit)